

Tylox® Gasket

make the connection

Timeless, Tylox[®] Quality, in a simple O-ring.

It may seem a "simple" design, but to ensure full functionality of the joint/gasket configuration, accuracy is critical.

All our "O" gaskets are crafted to the exacting quality standards that you have come to expect from your Tylox[®] products.

Tylox[®] "O" Gaskets offer :

Multiple Cord diameters, for all sizes of recess and joint configurations.

INSTALLATION

•Ensure Bell, Spigot, O-Ring recess and Oring are free from loose debris or foreign material.

•Lubricate the recess and gasket thoroughly with a suitable grade of Tylox[®] Pipe Lubricant, taking care not to fill the recess with excess lubricant.

•Snap the O-ring into the recess

•Equalize the tension in the rubber by running a screw-driver shaft, or similar tool, under the o-ring, around the full periphery of the recess.

•Thoroughly lubricate the sliding surfaces of the gasket and bell.


•Align the spigot with the bell, ensuring that the gasket is in contact with the bell around the full circumference of the pipe.

•Thrust spigot home, using suitable mechanical means. *Multiple compounds and durometers*, allow for material selection to meet the most stringent of application and/or soil conditions.

Precision volumetric control, utilizing custom designed volume cutter.

Smooth, high-strength splicing, utilizing the latest in automated splicing techniques

ASTM C361 and AWWA C300, 301, 302 material requirement compliance

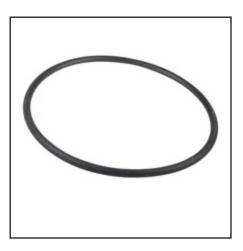

SPECIFICATIONS

Tylox[®] "O" gaskets are manufactured, as standard, to meet the material requirements of the following specifications:

•CSA A-257 •ASTM C361 •AWWA C300, 301 & 302

Other specifications may be available as special order. Please consult your Hamilton Kent representative for your specific requirements.

MATERIALS

Tylox[®] "O" gaskets are manufactures, as standard, in the following materials:

- •Isoprene
- **Optional Materials**
 - •Nitrile
 - •EPDM
 - •Neoprene

Other compounds may be available as special order. Please consult your Hamilton Kent representative for your specific requirements.

CONTACT US

Hamilton Kent

77, Carlingview Drive Toronto, Ontario, Canada. M9W 5J6 Phone (800) 268-8479 Fax (888) 674-6960 Web-Site www.hamiltonkent.com E-Mail sales@hamiltonkent.com

Lit_O_0302_ER2